



Please note:

Take care that the set is inserted correctly. Incorrect fitting, especially of the inclined precutter-plate (System UNGER) can cause the knife to break.

Exchange the blades in time to prevent the shoulder of the knife coming into contact with the plate.

Inspect the holeplates making sure that there are no cracks.

Check and fasten the screws of the knives if necessary.


Reground the plates from time to time.

If the knife stud is weared out please exchange it. A knife stud in a bad condition can cause a knife to break.

LICOSWISS Cutting Set System UNGER

Correct fitting

With 3 components

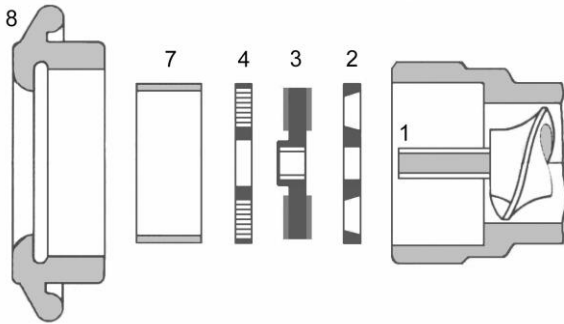


- 1 Knife stud
- 2 Precutter, large inclined opening towards Cylinder head !
Precutter with straight holes are usable on both sides
- 3 Knife, the bush of the knife always outwards
- 4 Final holeplate
- 7 Large distance ring
- 8 Final nut

Correct precutter:

If you use a double-side-bush knife from other manufacturer, you need a precutter (kidney plate) with large center hole.

With 5 components

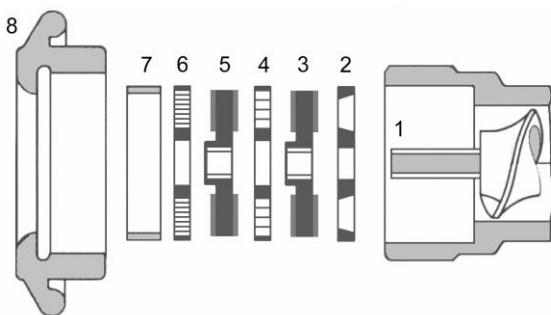

- 1 Knife stud
- 2 Precutter, large inclined opening towards cylinder head !
Precutter with straight holes are usable on both sides
- 3 Knife with single bush, the bush of the knife always outwards
- 4 Holeplate (> 10mm)
- 5 Knife with single bush, the bush always outwards
- 6 Final holeplate
- 7 Small distance ring
- 8 Final nut

Correct precutter:

If you use a double-side-bush knife from other manufacturer, you need a precutter (kidney plate) with large center hole.